

ASSEMBLY GUIDE


Transporta 8.5T Frame

DISCLAIMER: While all effort has been made to represent the products accurately, details may vary due to photography and graphical processes. The customer will make their own assessment as to the suitability of the products for the customer's purposes. The actual use of the product is within the sole control of the customer and Daywalk will not be responsible for such loss or damage resulting from such use. Sales are subject to standard terms and conditions of trade of Daywalk. E&OE

Kit Contains


1 x Transporta Unit including:

- 1 x Base Module
- 1 x Insert Module
- 1 x Canopy Module with roll-up cover including ratchet tensioners
- 4 x Locking & Lynch pins
- 4 x M30 Structural 8.8 bolts with double nuts, flat washer, plate washer (75x75mm) and spring washer

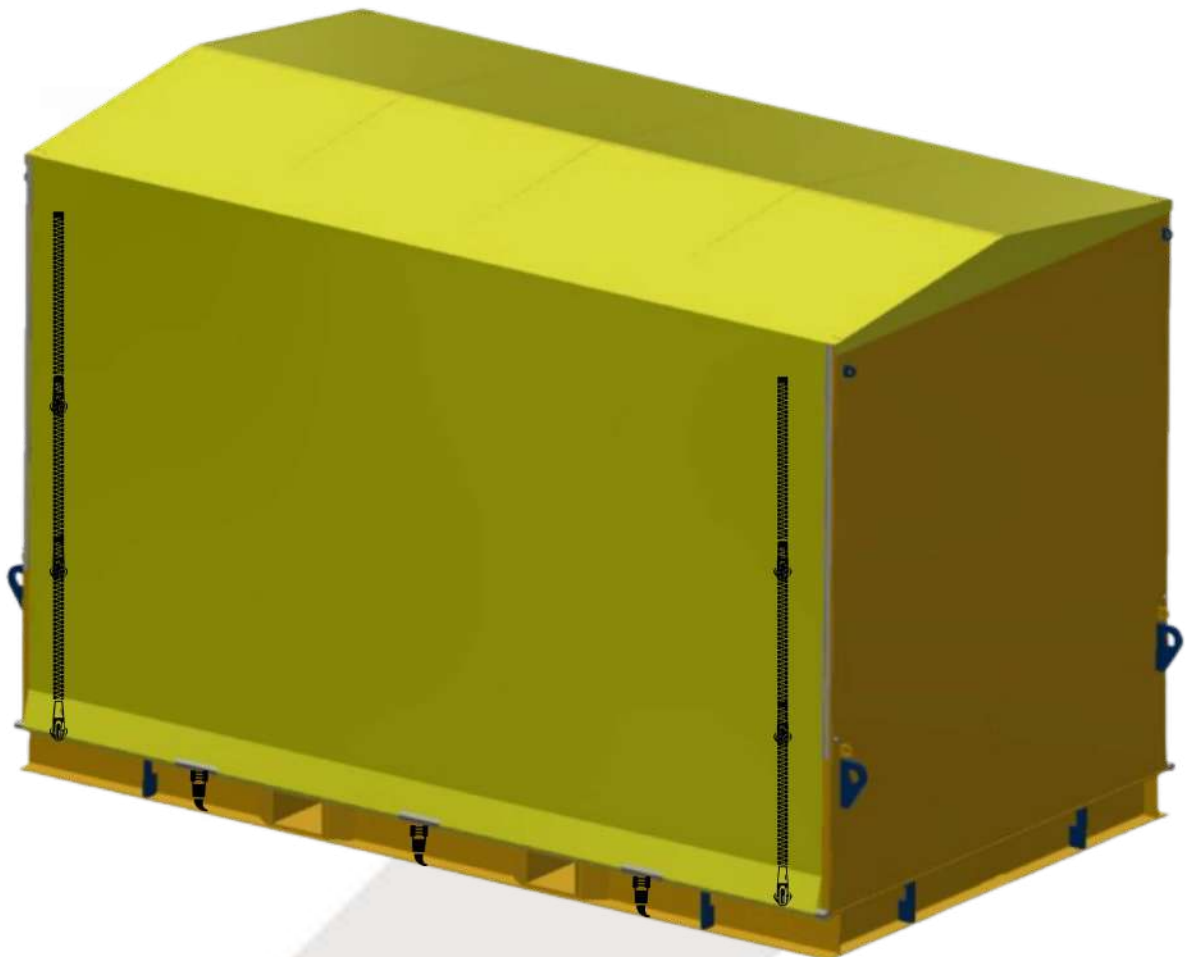


Assembly Guide for adding and removing your component.


Step 1: To install or remove your component into/ out of the Transporta, remove the roof by releasing the ratchet restraints on the base of the Transporta and removing them from the lug they are threaded through.

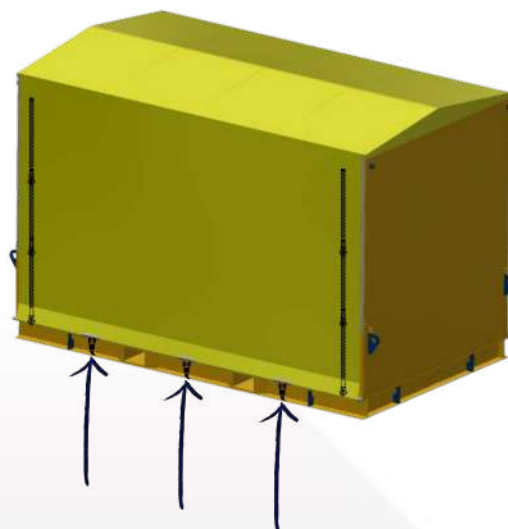

Step 2: Unzip the 4 zips to the top of the canopy sides, roll up the sides and clip into place with the clips fitted at the top of the cover.

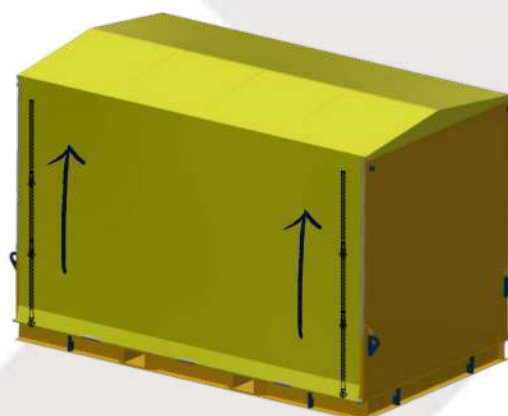


Step 3: Release the 4 x locking pins connecting the roof module with the base module and leave in the base of the Transporta so they do not get lost.

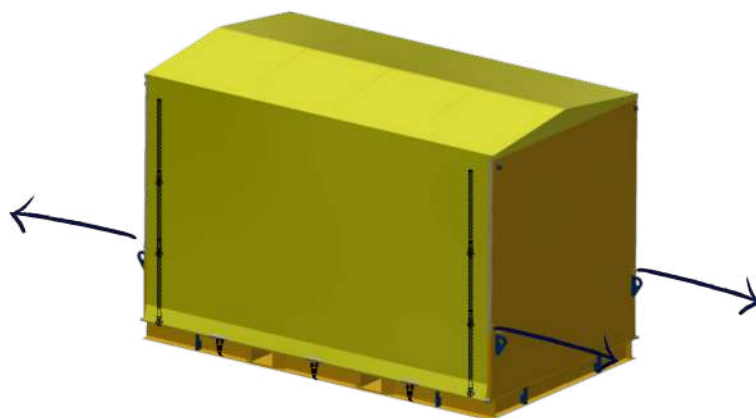


Step 4: Attach the 4 x crane-lift points to the roof and lift the roof safely off the base and place on a level surface nearby.

1. For windy conditions you can tie a rope or similar to the yellow lugs at the base of the sides to guide the roof down safely.
2. Do not use these lugs for any other purpose.
3. The base of the cover will slide out of the sail track when the roof is lifted. Ensure the flexible cover is not damaged underneath the roof module.

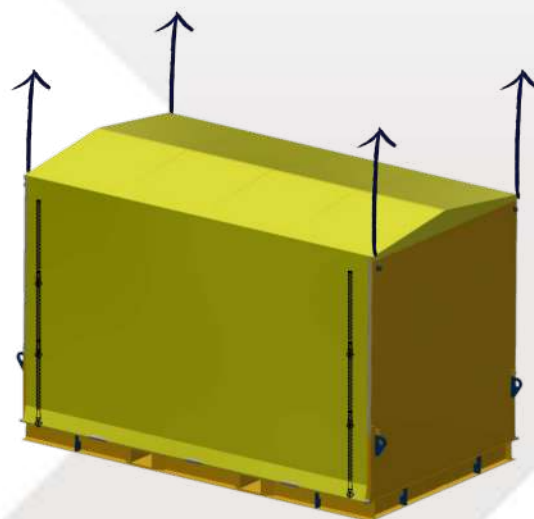

Reverse the steps on this page when removing your component.


Step 5: Install the 4 x M30 bolts by dropping them into the slots in the Insert Module. Slide them to the end of the slot, which is the outside end.

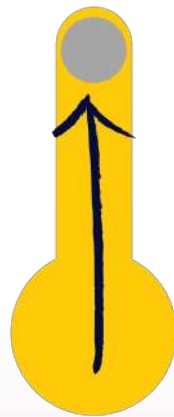

Slide bolt in

Step 6: Lower the component onto the frame and aim to centralise the bolts in the bolt holes of the component. Scan the QR code to view the guidance for safe usage of the Transporta regarding the load capacity.

Step 7: Slot the washers onto the top of the 4 x M30 bolts and tighten the 2 x 8.8 gr nuts, as shown below.

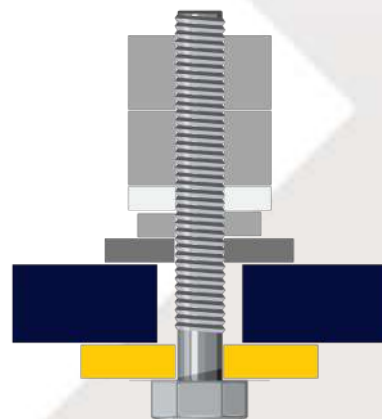

8.8gr Nut

8.8gr Nut

Spring Washer

Flat Washer


75 x 75mm Plate Washer

Component Foot

Insert Plate


M30 8.8gr structural 150mmL bolt

Step 8: Lift the roof above the base and safely lower it into place, ensuring that the bottom of the cover is sliding into the aluminium tracks on the four corners (you may need some assistance to complete this safely).

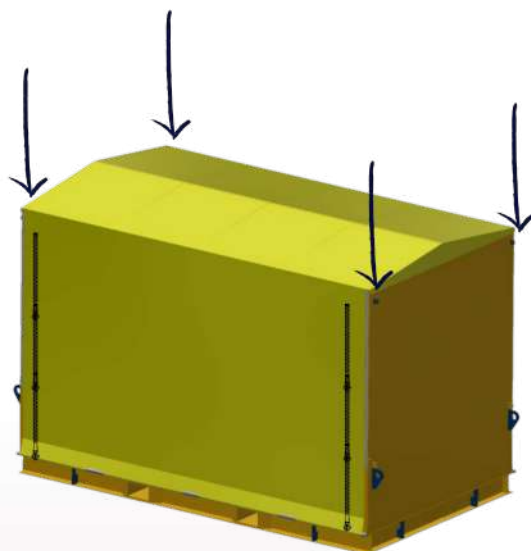


Step 9: Replace the 4 x locking pins in the corners including the lynch pin to lock the roof down to the base. The chain linking the lock and lynch pins needs to go through the gap in the cover to ensure the lock and lynch pins stay together.

Step 10: Un-roll the cover from where it is strapped up and close the zips completely to the base of the cover.

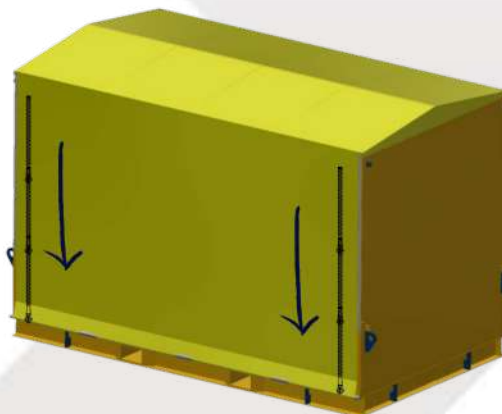

Step 11: Re-tension the flexible cover by feeding the loose end of the ratchet strap through the base lug and up to the ratchet buckle at the front, then tension till you are satisfied with the tension of the cover for road transit. Scan the QR code to view the guidance for safe use of the Transporta including lashing guidance to the truck.

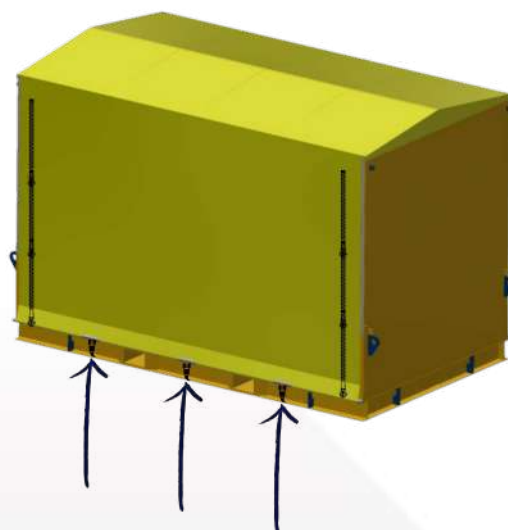

If you require any support, or for replacement parts, call DAYWALK support on 0456 581 695

Assembly Complete